


Depth stop

Part number: 3 21 27 069 01 0

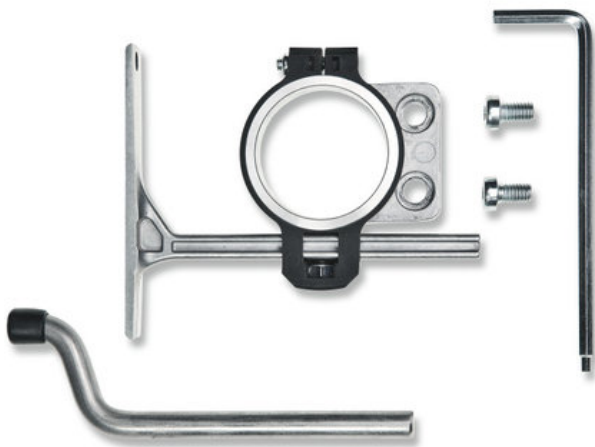

Depth stop for all saw blades. For accurate working at depth. Effective protection for blade and workpiece.

Contents: 1 adapter for attachment to the machine, rotates freely through 360°. 1 depth stop, 1 depth-adjustable guide block.

Can only be used with (A)FMM or (A)FSC.

Suitable for:

FEIN professional set for repairing/replacing windows, FEIN professional set for interior work with wood, FSC 2.0 Q, AFSC 18, FEIN professional set for repairing/replacing windows, FEIN professional set for interior work with wood, FEIN cordless MultiTalent, Battery-powered FEIN MultiMaster, FEIN MultiMaster Marine, FEIN MultiTalent QuickStart, FEIN MultiTalent Start, FEIN MultiMaster QuickStart, FEIN MultiMaster Top Extra, FEIN MultiMaster Top